

QSL9 and QSC8.3
Section 1 - Operating Instructions

To use the engine synchronization feature:

- Both engines **must** be in the same throttle position, running at the same rpm.
- Put the ENG SYNC switch (1) in the ON position by depressing the top of the rocker switch.

Both engines will adjust to the same rpm. The master throttle will control both engines.

NOTE: This feature will deactivate when the engine is shut down. When the engine is restarted, the switch **must** be turned OFF then turned ON again to activate the feature.

To turn the engine synchronization feature off:

1. Put the ENG SYNC switch (1) in the OFF position by depressing the bottom of the rocker switch.
2. Move either throttle lever to within 100 rpm of the other and the feature will deactivate. The throttle levers will now operate independently.