

Control Manifold

Bow Stateroom

Water Heater
20-gallons
Drain at start of winterizing

Capture AF here
5-micron **Filter**

Companionway **F/W Pump**
5.0 GPM
55-40 PSI
24VDC
Disconnect here to inject a little AF through pump

Port/Center Freshwater Tank
75-gallons

Stbd/Center Freshwater Tank
75-gallons

Deck Fill
(Stbd Side Inlet)

Deduced Routing **Washdown Outlet**
Engine Room


45 PSI Pressure Relief Valve **Dockwater Inlet**
Transom "Garage"

Use for compressed air winterizing **Washdown Outlet**
Transom "Garage"

Transom Shower
Starboard Cockpit

*See also “Water System (Bilge)” in the Sea Ray
2006 58DB Parts Manual, pp 152-153*

Freshwater System: Control Manifold - 1

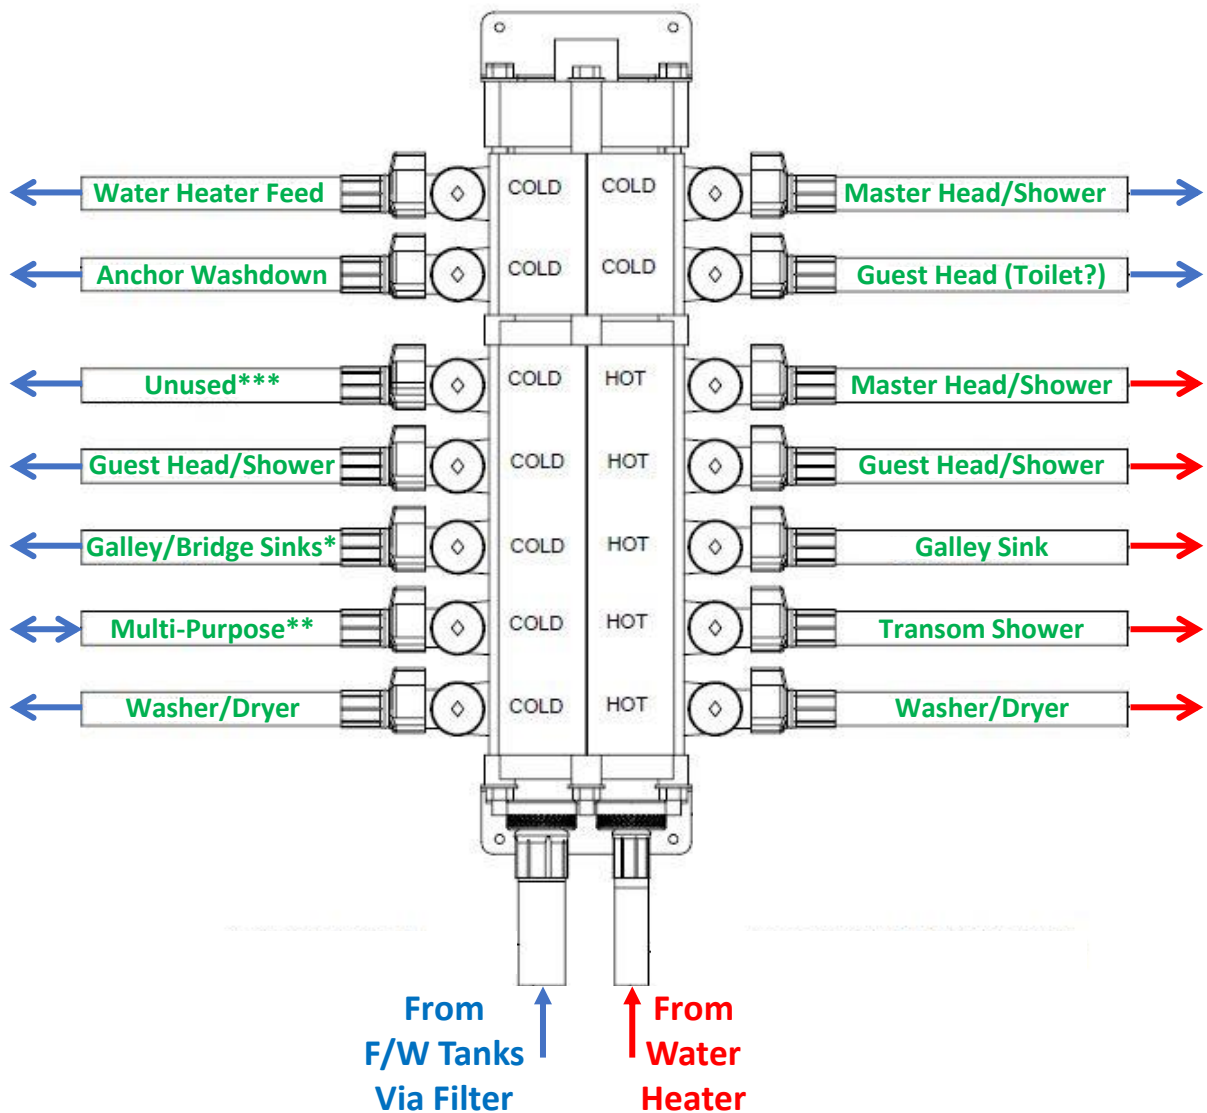


* Also includes supply lines to galley and bridge icemakers (bridge icemaker removed)

** Dock water inlet, transom & engine room washdowns, transom shower; external filter needed for shore water

*** Would have been used for drinking water filter to separate faucet at the galley sink

*See also "Water System (Manifolds)" in the Sea Ray
2006 58DB Parts Manual, pp 150-151*

Freshwater System: Control Manifold -2

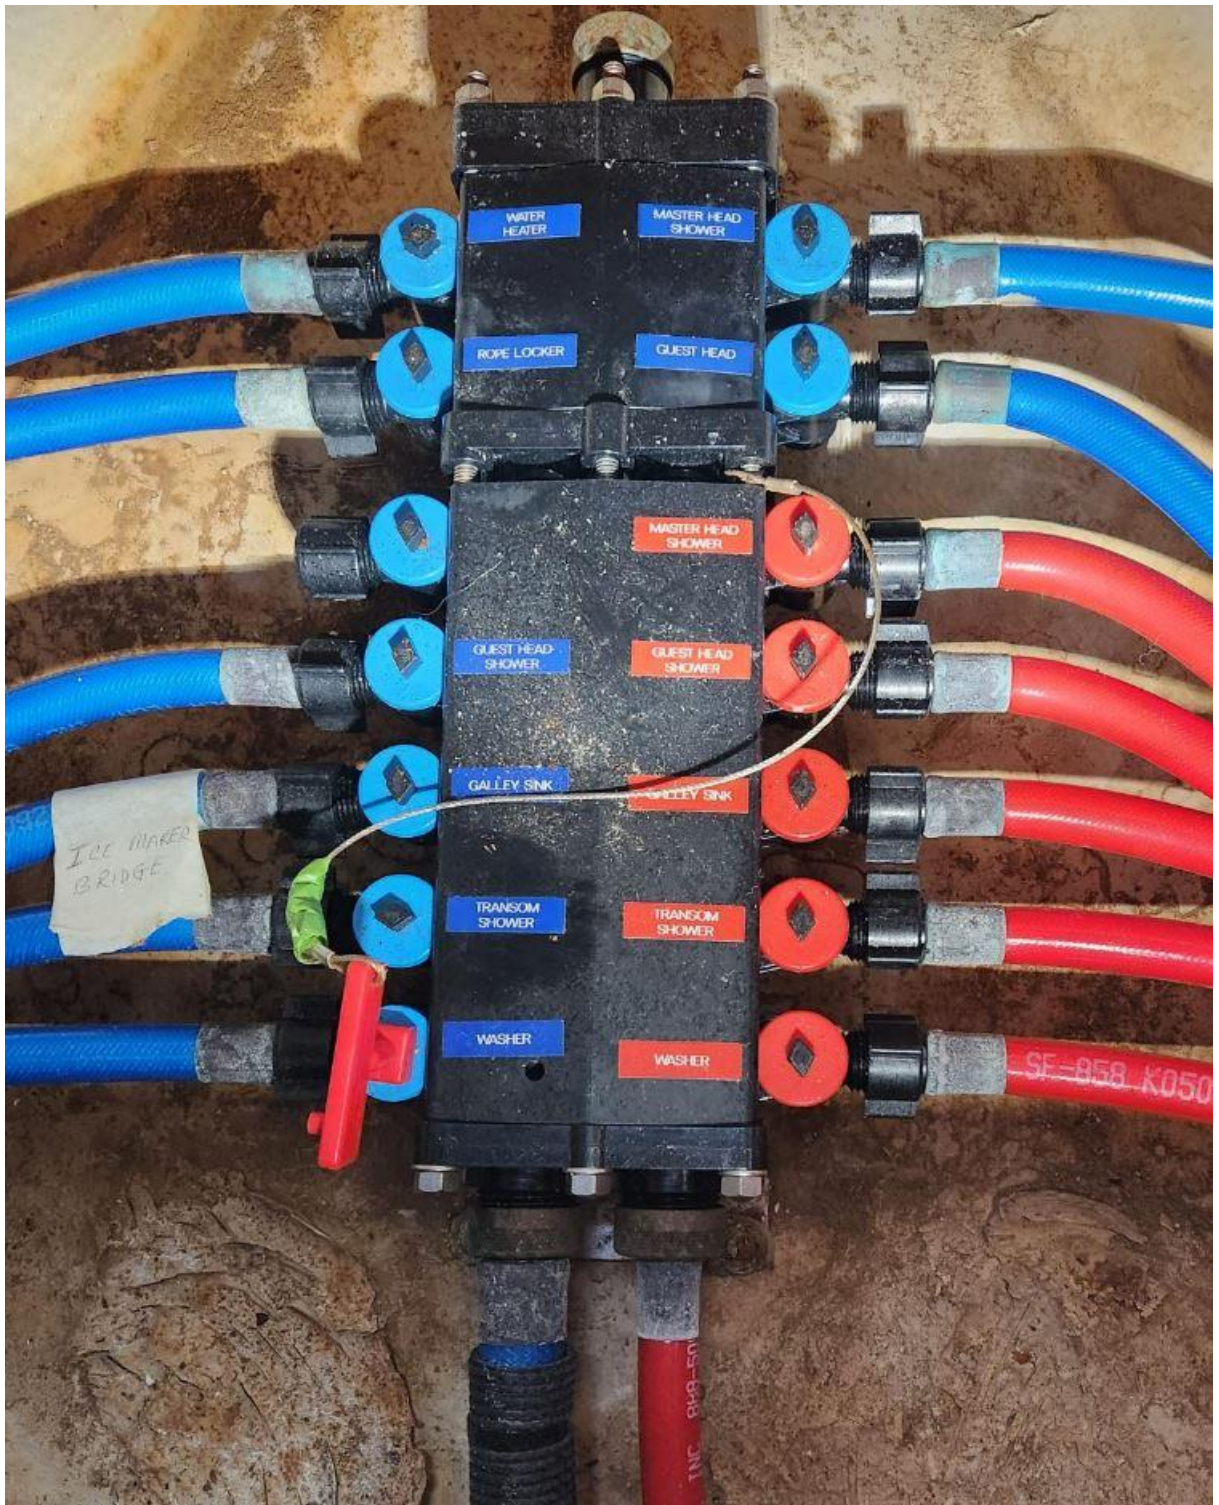

*See also "Water System (Manifolds)" in the Sea Ray
2006 58DB Parts Manual, pp 150-151*